

How to Clean a Whiteboard

Magiboards Whiteboards have specially treated surfaces to enable dry erasability of the boards. To ensure longevity of your Magiboards whiteboard and to avoid permanent staining use only Magiboards branded accessories on the surface for writing and cleaning

Cleaning Prior to Initial Use

Your whiteboard has been manufactured in a factory environment and has been packed in cardboard and other packaging materials. It has most likely been delivered to you via road transport, where it was exposed to exhaust fumes and other contamination. Prior to initial use clean your Magiboards whiteboard as follows:

- Clean the Magiboards whiteboard surface thoroughly with Magiboards Whiteboard Cleaner, sprayed onto a soft, clean and dry cloth. Do not spray directly onto the board.
- Wait for the Magiboards Whiteboard Cleaner to completely evaporate and then wipe the board with a soft clean cloth dampened with lukewarm water. Do not immerse the board or use excessive amounts of water, as water may enter the board core and can cause warping and/or delaminating.
- Dry the board thoroughly with a soft, clean and dry cloth.

Maintenance

Your Magiboards whiteboard should be cleaned regularly in the same way. The frequency of cleaning will depend on the intensity of use and the time dry marker ink is left on the board. This can vary from daily, for high traffic, or weekly, for medium traffic (writing is left on the board for more than a day), or monthly, for light traffic (writing is erased on the same day). Avoid wax or greasy substances from coming into contact with the whiteboard surface as this will affect erasability and cause smudging. Make sure your cleaners are aware of these instructions – Pledge is not a suitable board cleaner!

Recovery

If staining or smudging become apparent this is normal and it usually occurs due to ink residue on the surface. Stains are most often due to ink left on the surface for extended periods of time. Contamination can also be caused by exhaust fumes, factory fumes and particles and other airborne contaminations. Air conditioning systems can act as a catalyst for such contaminations.

Usually, stains and smudges can be removed with lukewarm water as described above. For stubborn stains, use Magiboards Whiteboard Cleaner. **DO NOT** use acids or alkalis, solvents, amonia, general household cleaning products or industrial cleaners; these may contain silicones, abrasives or other compounds that can damage the board. Use of anything other than water or Magiboards Whiteboard Cleaner will render our surface guarantee invalid.

Only "Dry Wipe" or "Whiteboard" markers shoud be used on the board. We recommend the use of Magiboards Whiteboard Markers as these are best suited for problem free marking and dry erasing on Magiboards whiteboards. Some other brands use either too little alcohol as a dry marker solvent (e.g. low odour markers) or too high a dry marker particle content (markers that dispense a lot of ink). These may be more difficult to dry erase, as will markers that come to the end of their life and from which the alcohol has nearly gone. Store whiteboard markers horizontally, or, if necessary, with the tips down. Storing markers upright will cause the alcohol dilution agent to sink to the bottom of the barrel and may make it difficult to erase markings.

Things Not To Do

PLEASE DO NOT erase dry marker annotations until the ink has dried, usually after 10-30 seconds. **DO NOT** use Magiboards Whiteboard Cleaner or any other whiteboard cleaner with Magiboards board erasers or any other board erasers. Both will cause smudging by smearing ink onto the surface, which will be difficult to remove.

Ghosting

Smudging and staining are sometimes referred to as ghosting. In fact, ghosting is a different phenomenon and nothing to worry about. If your whiteboard is not entirely clean, the alcohol in the dry marker may clean away any contamination on the surface while you write. After erasing the annotations the clean path may remain visible as a white ghost-like image. This can easily be prevented by making sure that your board surface is properly clean.





Problem Solving

Problem	Cause	Solution
 Smudging and Staining 	 Humidity levels or other environmental factors such as air conditioners. Packaging may cause a build-up of oil on the surface 	 Use Magiboards Whiteboard Cleaner to remove oils and contaminations. Follow the cleaning instructions above. Continued use will improve the erasing quality of your board
 Unable to erase marker ink from the board surface 	 Sub-standard or Permanent markers have been used Board surface is damaged 	 Magiboards Whiteboard Cleaner will remove marks from sub- standard markers and some permanent markers Inking over permanent marker ink with dry markers can dissolve permanent ink Replace whiteboard
Abrasive damage	Use of abrasive products has damaged the board surface	Replace whiteboard

Printed whiteboards

Printed boards should be cleaned prior to initial use and maintained in very much the same way as other whiteboards, as described above. Please be cautious with Magiboards Whiteboard Cleaner: it is a very powerful cleaner and when used in abudance it can dissolve the ink of your custom printed whiteboard. Only use Magiboards Whiteboard Cleaner in small quantities sprayed onto a dry, clean and soft cloth and remove it immediately after removing marks and contaminations. Always use lukewarm water after the use of Magiboards Whiteboard Cleaner.

Surface Guarantee

Magiboards whiteboards come with a surface guarantee depending on the type of whiteboard you purchased. Our top quality Enamel Steel whiteboards have a 25 year surface guarantee, meaning that you can write and erase over and over again for almost a lifetime without worrying about permanent staining, if you use the board properly as described above.

For the surface guarantee to be valid you must comply with these instructions of use, including the instructions for cleaning prior to initial use.

The surface guarantee becomes invalid if these instructions have not been followed, if the board surface is damaged in any way, if inappropriate products have been used on the surface, or is the boards are used outside, or in areas of heavy contamination.

If you would like to call upon your guarantee please contact the person(s) or organisation from whom you purchased the board. It is imperative that you provide them with proof of purchase, such as a receipt or invoice. Before you contact the seller, please make sure you attempt to clean the board by using the methods described in the section "Recovery" above.

Magiboards Whiteboard Surface Guarantee is not transferrable. If you are entitled to remedial action under the terms of the guarantee, Magiboards may decide to collect the board for recovery off-site, to send a representative to recover the board at your premises, or to replace the board. You will be required to facilitate Magiboards in their choice of remedial action to the best of your ability. This may include de-installation of the board, as this is not included in the guarantee; if Magiboards cannot attempt to recover the board due to lack of assistance or cooperation, this will render the guarantee invalid. If Magiboards decide to replace the board it will do so with a product with an equivalent board surface to the board under guarantee. This may be of a different model if the range has changed or is a board of the same model is not available.

Whatver the remedial action taken will not extend the period of guarantee, which will continue for the remainder of the relevant time from the date of purchase from Magiboards.

None of the above terms and conditions affect your statutory rights.

